


68 MODI PLATE ASSEMBLY INSTRUCTIONS

Step 1: Place assembled bed frame in front of headboard and position MODI-PLATE to determine which slots will line up with HEADBOARD BRACKETS and HEADBOARD. Use provided LOCK NUTS and BOLTS to attach MODI-PLATES to HEADBOARD BRACKETS as detailed in Figure 1.

Step 2: Bolt MODI-PLATES to HEADBOARD. (*Nuts and bolts to attach Modi-plates to headboard are not provided in this kit.*)

Figure 1

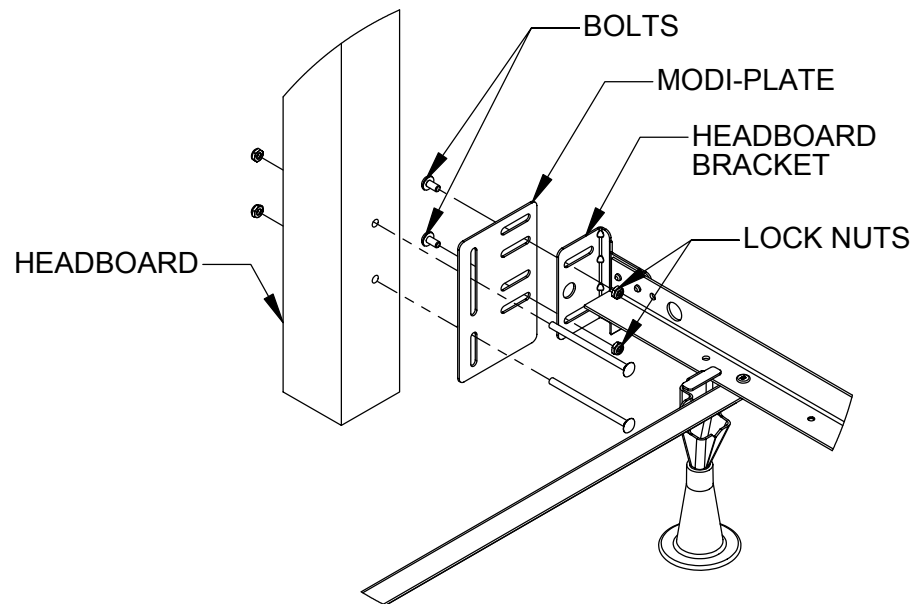

DATE
3-03-04

DWG. NO. **99300763**

DO NOT SCALE DRAWING SHEET 1 OF 1