

PARTS LIST

- 2 BED HOOKS (LEFT & RIGHT)
- 4 BOLTS 1/4 X 1/2
- 4 HEX NUTS 1/4-20
- 4 LOCK WASHERS

#65 BED HOOK INSTRUCTIONS

STEP 1

Insert one bed hook (hooks pointing upward) into headboard leg and tap hook securely into place.

STEP 2


Determine which set of slots in bed hook, frame should be bolted to, so that headboard legs “float” above floor.

STEP 3

Remove bed hook from headboard and loosely attach both bed hooks to frame, through slots determined previously, using bolts, lock washers and nuts provided.

STEP 4

Place headboard on hooks and tighten bolts securely. See drawing above right.

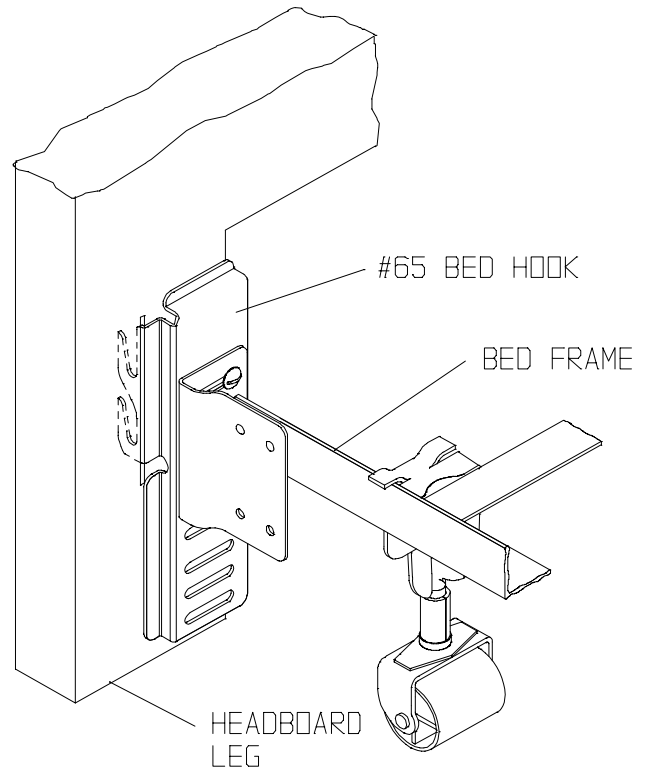

NOTE: #65 bed hooks may also be used to adapt Queen size bedding to most full size headboards and full size bedding to most queen size headboards, by interchanging the bed hooks left for right and right for left.